

Important Notice: with effective from [5 Sep 2010](#), we provide **alternate support for Gopass Taiwan**, if you did not buy from us and would [like to use our service](#) (with a nominal fee), please send an email to benlim@leading.com.my or call Ben Lim at **+(6017) 888-9932** Please see item (7) on page 2.

- 1) Please insert a SIM card {with Pin Code "disable" (Pin Code Request: off) } into your GPS Tracker unit.
- 2) Make a call to the GPS tracker unit. Ringing tone should be heard from the caller phone.
- 3) Send a SMS [32#8888#GMURL#http://maps.google.com/m?output=html&](#) to GPS Tracker unit, (only once).

Note: With effective from [5 Sep, 2010](#), all Gopass GPS Tracker users are required **to resend** the above **new SMS command** to their respective Gopass Tracker units due to **changes made by Google in its Map format**.

- 4) Send a SMS [52#8888#1](#) to GPS Tracker unit (only once), to activate GPS Data Logger function
(Send a SMS [32#8888#fixgpsdate#1](#) to GPS Tracker unit (only once), **only if the UTC Date is wrong**)

To Track using SMS Commands:

- a) Send a SMS [111#8888](#) to your GPS Tracker unit, you should receive **GPS coordinates** on your mobile phone.
Key in the GPS coordinates on Google Maps or GPS Navigator to find out the Map location.
- b) Send a SMS [215#8888](#) to your GPS Tracker unit, your should receive a Internet Web-link on your mobile phone.
Click on the Web-link connects you via 3G to Internet and subsequently shows you map location on Google Maps

To Setup Realtime Tracking using Google Maps or Google Earth: ** You may use either a) or b) **

a) Realtime Tracking using Google Maps:

- i) Download **GooLocate** software from www.leading.my/download/gopass/GooLocate/GL10386
- ii) Rename filename to **GL10386.exe** then RUN
- iii) Upon successful installation, a Goolocate icon will appear... click on the **Goolocate** to start...

b) Realtime Tracking using Google Earth: (Avoid using this from [21.6.2010](#), use **Goolocate !)**

- i) Download and then Install Google Earth from <http://earth.google.com/download-earth.html>
And then install the software. That is Google Earth needs to be installed before GooTrac
- ii) Download **GooTrac** software from www.leading.my/download/gopass/gootrac/GT22388
- iii) Rename filename to **GT22388.exe** then RUN
- iv) Upon successful installation, a GooTrac icon will appear... click on the **GooTrac** to start...

now, with either **Goolocate** or **GooTrac** installed, please proceed to configure the software:

click on Tool... "Data Switch"... Client (Receiver)... Add...

Target IP: gpsmalaysia.no-ip.info **Username:** **ben**

Target Port: 8088 **Password:** ben932 **Confirm Password:** ben932

Click "Save" **Note:** gpsmalaysia.no-ip.info is our IP in Malaysia.

We provide free server hosting to those who purchase GPS Trackers from us.

(We can also assign **unique Username and Password**, to protect privacy of GPS Tracker users and to allow users to track only their own vehicles. **Note:** Username: **ben** is a typical user, for Public Only)

******* Please take note that **UNLESS you are our customer**, **ben** will only a few of our vehicles BUT **NOT your vehicles**

- 5) To track vehicles WLJ9288 and BEN932, please make sure that, on the Data Switch, Client(Receiver), the "Active" is selected (ticked) and the "State" of Username: ben is connected
 Otherwise, please click on the Status icon, so that it appears as **Status: ON**
 (Note: The Status ON icon is one with a red and a green "up down" arrows on it)

Both Goolocate and GooTrac are simple to use. Here, we shall only show an example of **GooTrac**:

RED car 358244010543215 is a vehicle with Registration# WLJ9288 (as shown below)

RED car **355632001744136 is a vehicle with Registration# BEN932 (as shown below)

With effective from 5 Sep 2010 **358244010543215 **WLJ9288 is replaced by 358244017628241

With effective from 5 Sep 2010 **355632001744136 **BEN932 is replaced by 354745030660262

- i) Now, Tick the Selection (square) Box beside one or more RED car(s)
 and select one of the (round) Radio Button beside one of the vehicle.

Note: By selecting the "Radio Button", Google Earth will "Fly" to the selected vehicle)

- ii) Go back to GooTrac main menu,

then Select Start... Realtime Track... (A Tick will appear) Google Earth will THEN be launched.

GooTrac 2.1.2.3

IMEI	Driver	Licence	Data
<input type="checkbox"/> 358244010543215	WLJ9288.3215....	358244010543...	\$GPRMC,020832.000,A,0304.0108,N,10136.8093,E,0.00,,090508,,A*76
<input type="checkbox"/> 355632001744136	BEN932.4136.884	355632001744...	\$GPRMC,020832.000,A,0304.8967,N,10136.8121,E,22.48,1.52,090508,*3E

Receive Position: 358244010543215 VehicleCount: 2 | 2

Data Switch

Status: ON

Active	Target IP	Target Port	Username	Password	State
<input checked="" type="checkbox"/>	60.54.218.117	8088	ben	****	Connected
<input type="checkbox"/>	60.54.218.117	8088	leading	****	
<input type="checkbox"/>	59.120.2.234	8088	iptest	****	

- 6) Sample Tracks captured are available from <http://www.leading.com.my/misc/GPS-Tracks.htm>

7) We have 2 PC-based Servers for our customers to do **Realtime** Vehicle or Personal GPS Tracking.

In order for the Gopass GPS Tracker to send GPS Data to our server:

- i) the SIM card in the GPS Tracker unit must be 2G/Edge/3G Enabled.
- ii) The GPS Tracker must be configured remotely by SMS commands:

In the following example, we **assume** that the Service Provider of the SIM card (in the GPS Tracker unit) is from **Maxis** Mobile Malaysia. You are required to send 3 SMS to the GPS Tracker unit:

To enable GPS Data (of your GOPASS GPS Trackers) to send to our Malaysia Server,
You need to send the following SMS commands to your Gopass GPS Tracker units, for example:

600#8888#**unet**#0.0.0.0#**maxis**#wap
999#8888#**gpsmalaysia.no-ip.info**#3000
115#8888#10

Note: UNLESS you are our customer, **ben** will only show a few of our own vehicles BUT **NOT your vehicles**

The **unet**, **maxis** and **wap** are "codes" only applicable if you are using **Malaysia Maxis Mobile Operator**.

Important note: **0.0.0.0** is compulsory and it is fixed,

you must use this if you are sending your GPS Data (of your Gopass GPS Tracker) to our Malaysia server !!

In your country, the codes (such as unet, maxis, wap) could be different,
please see www.leading.my/download/GOPASS/APNTable.pdf

URGENT! With effective from **5 Sep 2010**, we provide **alternate support for Gopass Taiwan**,
if you did not buy from us and would [like to use our service](#),
please send email to benlim@leading.com.my

Useful APN Setting in Malaysia:

Maxis APN = net	Celcom APN = m2m.celcom.net.my	Digi APN = diginet
Maxis GPRS user ID = maxis	Celcom GPRS user ID = Not required	Digi GPRS user ID = guest
Maxis GPRS user password = wap	Celcom GPRS user password = Not require	Digi GPRS user password = guest

A complete APN settings for all countries are also available at
www.leading.com.my/download/GOPASS/APNTable.pdf

Complete SMS Codes for 2 Popular GOPASS GPS Models:

GPS-911: www.leading.com.my/download/GOPASS/GPS-911SMSCodes.pdf

AVL-900: www.leading.com.my/download/GOPASS/AVL-900SMSCodes.pdf

For further information, please call **Ben Lim** at **(017) 888-9932**